

# Digital controller for medium-low temperature refrigeration applications

## XW90LT

| 1.  | GENERAL WARNING                          |     |
|-----|--|-----|
| 2.  | GENERAL DESCRIPTION                      |     |
| 3.  | CONTROLLING LOADS                        | . 1 |
| 4.  | FRONT PANEL COMMANDS                     | . 1 |
| 5.  | AUTOMATIC KEYBOARD LOCK                  | . 2 |
| 6.  | MAX & MIN TEMPERATURE MEMORIZATION       | . 2 |
| 7.  | MAIN FUNCTIONS                           | . 2 |
| 8.  | PARAMETERS                               | . 2 |
| 9.  | DIGITAL INPUTS                           | . 4 |
| 10. | TTL SERIAL LINE - FOR MONITORING SYSTEMS |     |
| 11. | X-REP OUTPUT – OPTIONAL                  |     |
| 12. | INSTALLATION AND MOUNTING                |     |
| 13. | ELECTRICAL CONNECTIONS                   |     |
| 14. | HOW TO USE THE HOT KEY                   |     |
| 15. | ALARM SIGNALS                            | . 5 |
| 16. | TECHNICAL DATA                           | . 5 |
| 17. | CONNECTIONS                              | . 5 |
| 18. | DEFAULT SETTING VALUES                   | . 5 |
|     |  |     |

#### 1. GENERAL WARNING

#### 1.1 PLEASE READ BEFORE USING THIS MANUAL

- This manual is part of the product and should be kept near the instrument for easy and quick reference.
- The instrument shall not be used for purposes different from those described hereunder. It cannot be used as a safety device.
- Check the application limits before proceeding.

## 1.2 A SAFETY PRECAUTIONS

- Check the supply voltage is correct before connecting the instrument.
- Do not expose to water or moisture: use the controller only within the operating limits avoiding sudden temperature changes with high atmospheric humidity to prevent formation of condensation
- Warning: disconnect all electrical connections before any kind of maintenance.
- Fit the probe where it is not accessible by the End User. The instrument must not be opened.
- In case of failure or faulty operation send the instrument back to the distributor or to "Dixell S.p.A." (see address) with a detailed description of the fault.
- Consider the maximum current which can be applied to each relay (see Technical Data).
- Ensure that the wires for probes, loads and the power supply are separated and far enough from each other, without crossing or intertwining.
- In case of applications in industrial environments, the use of mains filters (our mod. FT1) in parallel with inductive loads could be useful.
- Dixell SrI reserves the right to change the composition of its products, even without notice, ensuring the same and unchanged functionality.

#### 2. GENERAL DESCRIPTION

Model XW90LT, format 38x185mm, is microprocessor based controller, suitable for applications on medium or low temperature ventilated refrigerating units. It has 6 relay outputs to control compressor, fan, defrost, which can be either electrical or reverse cycle (hot gas) and light. The other ones can be used as auxiliary output or for alarm signalling. It could be provided with a Real Time Clock which allows programming of up to 6 daily defrost cycles, divided into holidays and workdays. A "Day and Night" function with two different set points is fitted for energy saving. It is also provided with up to four NTC or PTC probe inputs, the first one for temperature control, the second one, to be located onto the evaporator, to control the defrost termination temperature and to managed the fan. One of the 2 digital inputs can operate as third temperature probe. The fourth probe is used to signal the condenser temperature alarm or to display a temperature.


The HOT KEY output allows to connect the unit, by means of the external module XJ485-CX, to a network line **ModBUS-RTU** compatible such as the **dlx2lL** monitoring units of X-WEB family. It allows to program the controller by means the HOT KEY programming keyboard.

The instrument is fully configurable through special parameters that can be easily programmed through the keyboard.

## 3. CONTROLLING LOADS

#### 3.1 COMPRESSOR

The regulation is performed according to the temperature measured by the thermostat probe with a positive differential from the set point: if the temperature increases and reaches set point plus differential the compressor is started and then turned off when the temperature reaches the set point value again.



In case of fault in the thermostat probe the start and stop of the compressor are timed through parameters Con and CoF.

## 3.2 DEFROST

Two defrost modes are available through the tdF parameter: defrost through electrical heater (tdF = EL) and hot gas defrost (tdF = in).

The defrost interval depends on the presence of the RTC (optional). If the RTC is present is controlled by means of parameter **EdF**:

- EdF=in: a defrost starts after elapsing the idF time (standard way for controller without RTC).
- EdF=rtC: defrosts are scheduled by using a real time clock system, depending on the hours set in the parameters Ld1..Ld6, during workdays, and in Sd1...Sd6 during holidays.

Other parameters are used to control defrost cycles: its maximum length (MdF) and two defrost modes: timed or controlled by the evaporator's probe (P2P).

At the end of defrost dripping time is started, its length is set in the Fdt parameter. With Fdt=0 the dripping time is disabled.

#### 3.3 CONTROL OF EVAPORATOR FANS

The fan control mode is selected by means of the FnC parameter.

- FnC=C\_n: fans will switch ON and OFF with the compressor and not run during defrost;
- FnC=o\_n: fans will run even if the compressor is off, and not run during defrost;
- FnC=C\_Y: fans will switch ON and OFF with the compressor and run during defrost;
- FnC=o\_Y: fans will run continuously also during defrost.

After defrost, there is a timed fan delay allowing for drip time, set by means of the Fnd parameter. An additional parameter FSt provides the setting of temperature, detected by the evaporator probe, above which the fans are always OFF. This is used to make sure circulation of air only if his temperature is lower than set in FSt.

#### 3.3.1 Forced activation of evaporator fans

This function, managed by the FCt parameter, is designed to avoid short cycles of evaporator fans, which could happen when the controller is switched on or after a defrost (when the room air warms the evaporator). If the temperature difference between the evaporator and the room probes is higher than the value set in the FCt parameter the fans are switched on. With FCt=0 this function is disabled.

#### 3.3.2 Fans cyclic activation with compressor off.

When FnC=C-n or C-Y (fans working in parallel with the compressor), by means of the Fon and FoF parameters the fans can carry out on and off cycles even if the compressor is switched off. When the compressor is stopped the fans go on working for the Fon time. With Fon=0 the fans remain always off, when the compressor is off.

#### 3.4 AUXILIARY OUTPUT CONFIGURATION

The functioning of the auxiliary relay (default terminals 3-4) can be set by the **oAx** parameters according to the kind of application. In the following paragraph the possible settings are explaided.

#### 3.4.1 Auxiliary thermostat

A possible use is the anti condensing heater, with the possibility of switching it on and off also by keyboard.

#### Parameters involved:

- ACH: kind of regulation for the auxiliary relay: Ht: heating; cL: cooling;
- SAA: set point for auxiliary relay
- SHy: differential for auxiliary relay;
- ArP: probe for auxiliary relay;
- Sdd: auxiliary output off during defrost.

The differential is given by the SHy parameter.

The auxiliary relay can be switched on also by using the AUX button. In this case it remains on till it's manually switched off.

NOTE: If oAx=US and ArP=nP (no probe for auxiliary output), the AUX relay can be activated only by pushing the AUX button of the kevboard.

#### 3.4.2 On/off relay – oAx = onF

In this case the relay is activated when the controller is turned on and de-activated when the controller is turned off.

#### 3.4.3 Neutral zone regulation

With oAx=db the AUX relay can control a heater element to perform a neutral zone action.

- output oAx cut in = SET-HY;
- output oAx cut out = SET

#### 3.4.4 Second compressor

With oAx=CP2, the AUX relay operates as second compressor: it is activated in parallel with the relay of the first compressor, with a proper activation delay (set in the AC1 parameter). Both the compressors are switched off at the same time.

#### 3.4.5 Alarm relay

With oAx=ALr the AUX relay operates as alarm relay. It is activated every time an alarm happens. Its status depends on the tbA parameter:

- tbA=Y: the relay is silenced by pressing any key;
- tbA=n: the alarm relay remains on until the alarm condition recovers

#### 3.4.6 Night blind management during energy saving cycles

With oAx=HES the AUX relay operates to manage the night blind: the relay is energised when the energy saving cycle is activated by digital input, frontal button or RTC (optional).

#### 4. FRONT PANEL COMMANDS



| SET         | To display target set point; in programming mode it selects a parameter or confirm an operation.                               |
|-------------|--|
| **          | (DEF) To start a manual defrost  |
| *           | (UP) To see the max. stored temperature; in programming mode it browses the parameter codes or increases the displayed value.  |
| $\triangle$ | (DOWN) To see the min stored temperature; in programming mode it browses the parameter codes or decreases the displayed value. |
| (1)         | (OFF) To switch the instrument off, if onF=oFF.  |
| - <b>\</b>  | (LiG) To switch the light, if oAx=Lig.   |
| AUX         | To switch the auxiliary relay, with oAx=AUS  |
| <b>※</b> )  | To activate/de-activate the energy saving cycle  |

#### KEY COMBINATIONS:

| *\times + \times | To lock & unlock the keyboard.             |
|------------------|--|
| SET+♥            | To enter in programming mode.              |
| SET + ®          | To return to the room temperature display. |

#### **USE OF LEDS**

Each LED function is described in the following table

| LED          | MODE     | FUNCTION                              |
|--------------|----------|---------------------------------------|
| *            | ON       | Compressor enabled                    |
| **           | Flashing | Anti-short cycle delay enabled        |
| *            | ON       | Defrost enabled                       |
| ****         | Flashing | Drip time in progress                 |
| 45           | ON       | Fans enabled                          |
|              | Flashing | Fans delay after defrost in progress. |
|              | ON       | An alarm is occurring                 |
| (*)          | ON       | Continuous cycle is running           |
| <b>(\$)</b>  | ON       | Energy saving enabled                 |
| - <b>\</b> \ | ON       | Light on                              |
| AUX          | ON       | Auxiliary relay on                    |
| °C/°F        | ON       | Measurement unit                      |
| O/ F         | Flashing | Programming phase                     |

#### **AUTOMATIC KEYBOARD LOCK**

To avoid accidental modifications of the controller settings, the XW90LT keyboard will be locked automatically if no key will be touched for 60 seconds. The XW90LT will show "LoC" flashing for few seconds when it's locking. The light key is operating even if the keyboard is locked

#### 5.1 TO UNLOCK THE KEYBOARD

- Touch any key
- The keys will be lighted
- Keep a key pushed for few seconds till the "on" message is displayed

#### MAX & MIN TEMPERATURE MEMORIZATION

#### **HOW TO SEE THE MIN TEMPERATURE**

- Press and release the DOWN key
- The "Lo" message will be displayed followed by the minimum temperature recorded.
- 3. By pressing the **DOWN** key again or by waiting 5 sec the normal display will be restored.

#### 6.2 **HOW TO SEE THE MAX TEMPERATURE**

- 1 Press and release the UP key
- The "Hi" message will be displayed followed by the maximum recorded temperature
- 3. By pressing the **UP** key again or by waiting 5 sec the normal display will be restored

#### 6.3 HOW TO RESET THE MAX AND MIN TEMPERATURE RECORDED

- Keep SET key pressed more than 3 sec, while the max or min temperature is displayed. (rSt message will be displayed)
- To confirm the operation the "rSt" message starts blinking and the normal temperature will be displayed

#### 7. MAIN FUNCTIONS

#### 7.1 TO SET THE CURRENT TIME AND DAY (ONLY WITH RTC)

When the instrument is switched on, it's necessary to program the time and day.

- Enter the Pr1 programming menu, by pushing the SET+ DOWN keys for 3 sec.
- 2 The rtC parameter is displayed. Push the SET key to enter the real time clock menu.
- The Hur (hour) parameter is displayed.
- Push the SET and set current hour by the UP and DOWN keys, then push SET to 4. confirm the value
- Repeat the same operations with Min (minutes) and dAy (day) parameters

To exit: Push both SET+UP keys or wait for 15 sec without pushing any keys.

#### HOW TO SEE THE SET POINT 7.2



- Push and immediately release the SET key: the display will show the Set point value.
- Push and immediately release the SET key or wait for 5 sec to display the probe value again.

#### 7.3 HOW TO CHANGE THE SETPOINT

- Push the SET key more than 2 sec to change the Set point value
- The value of the set point will be displayed and the "°C" or "°F" LED will start blinking. To change the Set value, push both **UP** and **DOWN** arrows within 10 sec.
- To store the new set point value, push the SET key again or wait for 10 sec

#### 7.4 HOW TO START A MANUAL DEFROST



Push the DEF key more than 2 sec and to start a manual defrost.

#### **HOW TO CHANGE A PARAMETER VALUE**

To change any parameter, operate as follows

- 1. Enter the Programming mode by pressing both **SET+DOWN** keys for 3 sec (the " ${}^{\circ}$ C" or " ${}^{\circ}$ F" LED will start blinking).
- 2. Select the required parameter and then press the SET key to display its value.

- 3. Use UP or DOWN keys to change its value.
- 4. Press SET to store the new value and move to the following parameter.

To exit: press both SET+UP keys or wait for 15 sec without pressing any key.

NOTE: the set value is stored even when the procedure is exited by waiting the time-out to expire.

#### 7.6 THE HIDDEN MENU

The hidden menu shows all the parameters of the instrument

#### 7.6.1 HOW TO ENTER THE HIDDEN MENU (Pr2)

- 1. Enter the Programming mode by pressing the SET+DOWN keys for 3 sec (the "°C" or "°F" LED will start blinking).
- 2. Released the keys and then push again the SET+DOWN keys more than 7 sec. The "Pr2" label will be displayed immediately followed by the HY parameter. NOW THE HIDDEN MENU IS DISPLAYED.
- Select the required parameter
- Press the SET key to display its value
- Use UP or DOWN keys to change its value.
- 6. Press SET to store the new value and move to the following parameter.

To exit: press SET+UP keys or wait for 15 sec without pressing any key.

NOTE1: if no parameters are present in Pr1, after 3 sec the "noP" message will be displayed. Keep the keys pushed till the Pr2 message is displayed.

NOTE2: the set value is stored even when the procedure is exited by waiting the time-out to expire.

#### 7.6.2 MOVE A PARAMETER FROM Pr2 TO Pr1 AND VICEVERSA.

Each parameter present in the Pr2 (HIDDEN MENU) can be moved to the Pr1 (user level) by pressing both SET+DOWN keys.

When in Pr2 (hidden menu) if a parameter is visible in Pr1, then the decimal point will be on.

#### 7.7 MANUALLY LOCK AND UNLOCK THE KEYBOARD

# <sup>®</sup>△+▽

#### HOW TO LOCK THE KEYBOARD

- Keep both UP+DOWN keys pressed more than 3 sec.
- The "PoF" message will be displayed and the keyboard is locked. At this point it is only possible the viewing of the set point or the MAX o Min temperature stored and to switch ON and OFF the light, the auxiliary output and the instrument.

#### HOW TO UNLOCK THE KEYBOARD

Keep bothj UP+DOWN keys pressed more than 3 sec.

#### 7.8 THE CONTINUOUS CYCLE

When defrost is not active, a continuous cycle can be activated by keeping the UP key pressed for about 3 sec. The compressor operates to maintain the CCS set point for the time set through the CCt parameter. The cycle can be terminated before the end of the set time by keeping the UP key pressed 3 sec

#### 7.9 THE ON/OFF FUNCTION



With onF=oFF, after pushing the ON/OFF key the instrument is switched off. The "OFF" message will be displayed. In this configuration the regulation is disabled. To switch the instrument on, push again the ON/OFF key.

WARNING: Loads connected to the normally closed contacts of the relays are always supplied and under voltage, even if the instrument is in stand by mode.

#### 8. PARAMETERS

Real time clock menu (only for controller with RTC): to set the time, date and

## REGULATION

| HY  | Differential: (0.1 to 25.5°C; 1 to 45°F) intervention differential for set point. Compressor Cut IN is Set Point + differential (HY). Compressor Cut OUT is when the temperature reaches the set point. |
|-----|---|
| LS  | Minimum set point: (-55°C to SET; -67°F to SET) sets the minimum value for the set point.   |
| US  | Maximum set point: (SET to 150°C; SET to 302°F) set the maximum value for set point.  |
| ot  | <b>Thermostat probe calibration:</b> (-12.0 to 12.0 °C; -21 to 21 °F) allows to adjust possible offset of the thermostat probe.   |
| P2P | Evaporator probe presence: (n; Y) n = not present, the defrost stops by time;<br>Y = present, the defrost stops by temperature.   |
| οE  | <b>Evaporator probe calibration:</b> (-12.0 to 12.0 °C; -21 to 21 °F) allows to adjust possible offset of the evaporator probe.   |
| P3P | <b>Third probe presence (P3):</b> (n; Y) n = not present, the terminals 18-20 operate as digital input; Y = present, the terminals 18-20 operate as third probe.  |
| о3  | <b>Third probe calibration (P3):</b> (-12.0 to 12.0°C; -21 to 21°F) allows to adjust possible offset of the third probe.  |
| P4P | Fourth probe presence: (n; Y) n = Not present; Y = present.   |
| 04  | <b>Fourth probe calibration:</b> (-12.0 to 12.0°C; -21 to 21°F) allows to adjust possible offset of the fourth probe.   |
| odS | Outputs activation delay at start up: (0 to 255min) this function is enabled at the initial start up of the instrument and inhibits any output activation for the period of time set in the parameter.  |
| AC  | Anti-short cycle delay: (0 to 50min) minimum interval between the compressor stop and the following restart.  |

as for the following formula (rtr(P1-P2)/100 + P2) CCt Compressor ON time during continuous cycle: (0.0 to 24h00min, res. 10min) allows to set the length of the continuous cycle. Compressor stays on without interruption during **CCt** time. This is useful, for instance, when the room is filled with new products.

XW90LT

CCS Set point for continuous cycle: (-55 to 150°C; -67 to 302°F) it sets the set point used during the continuous cycle.

Percentage of the second and first probe for regulation: (0 to 100; 100=P1, 0=P2) it allows to set the regulation according to the percentage of the first and second probe,

Compressor ON time with faulty probe: (0 to 255min) time during which the compressor is active in case of faulty thermostat probe. With Con=0 compressor is always OFF.

2/6



OF Compressor OFF time with faulty probe: (0 to 255min) time during which the compressor is OFF in case of faulty thermostat probe. With CoF=0 compressor is always active.

#### DISPLAY

| CF  | Temperature measurement unit: (°C; °F) °C = Celsius; °F = Fahrenheit.  WARNING: When the measurement unit is changed the SET point and the values of the parameters HY, LS, US, ot, ALU and ALL have to be checked and modified (if necessary).  |
|-----|--|
| rES | Resolution (for °C): (in=1°C; dE=0.1°C) allows decimal point display.  |
| Lod | Instrument display: (P1; P2, P3, P4, SET, dtr) it selects which probe is displayed by the instrument. <b>P1</b> = Thermostat probe; <b>P2</b> = Evaporator probe; <b>P3</b> = Third probe (only for model with this option enabled); <b>P4</b> = Fourth probe, <b>SET</b> = set point; <b>dtr</b> = percentage of visualization. |
| rEd | X-REP display (optional): (P1; P2, P3, P4, SET, dtr) it selects which probe is displayed by X- REP. P1 = Thermostat probe; P2 = Evaporator probe; P3 = Third probe (only for model with this option enabled); P4 = Fourth probe, SET = set point; dtr = percentage of visualization.   |
| dLY | <b>Display delay:</b> (0 to 20min00s; res. 10s) when the temperature increases, the display is updated of 1°C or 1°F after this time.  |
| dtr | Percentage of the second and first probe for visualization when Lod=dtr: (0 to 99; 100=P1, 0=P2) if Lod=dtr it allows to set the visualization according to the percentage of the first and second probe, as for the following formula (dtr(P1-P2)/100 + P2).  |

#### DEFROST

| EdF | Defrost mode (only for controller with RTC):  - rtC: Real Time Clock mode. Defrost time follows Ld1+Ld6 parameters on workdays and Sd1+Sd6 on holidays.  - in: interval mode. The defrost starts when the time idf is expired.                      |
|-----|---|
| tdF | Defrost type: (EL; in) EL = electrical heater; in = hot gas.  |
| dFP | Probe selection for defrost termination: (nP; P1; P2; P3; P4) nP = no probe; P1 = thermostat probe; P2 = evaporator probe; P3 = configurable probe; P4 = Probe on Hot Key plug.   |
| dtE | <b>Defrost termination temperature:</b> (-55 to 50°C; -67 to 122°F) (enabled only when <b>EdF=Pb</b> ) sets the temperature measured by the evaporator probe, which causes the end of defrost.  |
| idF | <b>Interval between defrost cycles:</b> (0 to 120hours) determines the interval of time between two defrost cycles.   |
| MdF | (Maximum) length for defrost: (0 to 255min) when P2P=n, (not evaporator probe: timed defrost) it sets the defrost duration. When P2P=Y (defrost end based on temperature) it sets the maximum length for defrost.                                   |
| dSd | Start defrost delay: (0 to 99min) this is useful when different defrost start times are necessary to avoid overloading the plant.   |
| dFd | Temperature displayed during defrost: (rt; it; SEt; dEF) rt = real temperature; it = temperature at defrost start; SEt = set point; dEF = "dEF" label.  |
| dAd | MAX display delay after defrost: (0 to 255min) sets the maximum time between the end of defrost and the restarting of the real room temperature display.  |
| Fdt | <b>Drip time:</b> (0 to 120min) time interval between reaching defrost termination temperature and the restoring of the control's normal operation. This time allows the evaporator to eliminate water drops that might have formed due to defrost. |
| dPo | First defrost after start-up: (n; Y) n = after the idF time, Y = immediately.   |
| dAF | <b>Defrost delay after continuous cycle:</b> (0.0 to 24h00min, res. 10min) time interval between the end of the fast freezing cycle and the following defrost related to it.  |

#### FANS

| FnC | Fans operating mode: (C-n; o-n; C-Y; o-Y) C-n = runs with the compressor, OFF during defrost; o-n = continuous mode, OFF during defrost; C-Y = runs with the compressor, ON during defrost; o-Y = continuous mode, ON during defrost.                         |
|-----|---|
| Fnd | Fans delay after defrost: (0 to 255min) interval between end of defrost and evaporator fans start.  |
| FCt | Temperature differential to avoid fan short cycles: (0 to 59°C; 0 to 90°F) (N.B.: FCt=0 means function disabled) if the difference of temperature between the evaporator and the room probes is higher than FCt value, the fans will be switched on.          |
| FSt | Fans stop temperature: (-55 to 50°C; -67 to 122°F) setting of temperature, detected by evaporator probe, above which fans are always OFF.   |
| Fon | Fan ON time: (0 to 15min) with Fnc=C_n or C_Y, (fan activated in parallel with compressor) it sets the evaporator fan ON cycling time when the compressor is off. With Fon=0 and FoF≠0 the fan are always off, with Fon=0 and FoF=0 the fan are always off.   |
| FoF | Fan OFF time: (0 to 15min) With FnC=C_n or C_Y, (fan activated in parallel with compressor) it sets the evaporator fan off cycling time when the compressor is off. With Fon=0 and FoF≠0 the fan are always off, with Fon=0 and FoF=0 the fan are always off. |
| FAP | Probe selection for fan management: (nP; P1; P2; P3; P4) nP = no probe;<br>P1 =thermostat probe; P2 = evaporator probe; P3 =configurable probe; P4 = Probe on<br>Hot Key plug.  |

#### AUXILIARY THERMOSTAT CONFIGURATION - OAx = AUS

| ACH | Kind of regulation for auxiliary relay: (Ht; CL) Ht = heating; CL = cooling.  |
|-----|---|
| SAA | <b>Set Point for auxiliary relay:</b> (-55.0 to 150.0°C; -67 to 302°F) it defines the room temperature set point to switch auxiliary relay.   |
| SHY | Differential for auxiliary output: (0.1 to 25.5°C; 1 to 45°F) intervention differential for auxiliary output set point.  • ACH=CL, AUX Cut in is [SAA+SHY]: AUX Cut out is SAA.   |
|     | ACH=Ht, AUX Cut in is [SAA-SHY]; AUX Cut out is SAA.  |
| ArP | Probe selection for auxiliary: (nP; P1; P2; P3; P4) nP = no probe, the auxiliary relay is switched only by the digital input; P1 = Probe 1 (Thermostat probe); P2 = Probe 2 (evaporator probe); P3 = Probe 3 (display probe); P4 = Probe 4. |
| Sdd | Auxiliary relay off during defrost: (n; Y) n = the auxiliary relay operates during defrost. Y = the auxiliary relay is switched off during defrost.   |

#### ALARMS

|     | alarms are disabled; <b>P1</b> = Probe 1 (Thermostat probe); <b>P2</b> = Probe 2 (evaporator probe); <b>P3</b> = Probe 3 (display probe); <b>P4</b> = Fourth probe.  |
|-----|--|
| ALC | Temperature alarms configuration: (Ab; rE) Ab = absolute temperature, alarm temperature is given by the ALL or ALU values. rE = temperature alarms are referred to the set point. Temperature alarm is enabled when the temperature exceeds the ISET+ALUI or ISET-ALLI values. |

Probe selection for alarm: (nP; P1; P2; P3; P4) nP = no probe, the temperature

#### ALU MAXIMUM temperature alarm:

- If ALC=Ab: [ALL to 150.0°C or ALL to 302°F]
- If ALC=rE: [0.0 to 50.0°C or 0 to 90°F]

when this temperature is reached the alarm is enabled, after the ALd delay time.

#### ALL Minimum temperature alarm:

- If ALC=Ab: [-55°C to ALU; -67 to ALU]
- If ALC=rE: [0.0 to 50.0°C or 0 to 90°F]

when this temperature is reached the alarm is enabled, after the **ALd** delay time.

FH Differential for temperature alarm recovery: (0.1 to 25.5°C: 1 to 45°F) intervential to the content of the content

AFH Differential for temperature alarm recovery: (0.1 to 25.5°C; 1 to 45°F) intervention differential for recovery of temperature alarm.

ALd Temperature alarm delay: (0 to 255 min) time interval between the detection of an alarm condition and alarm signalling.

dAo Exclusion of temperature alarm at start-up: (0.0 to 24h00min, res. 10min) time interval between the detection of the temperature alarm condition after instrument power on and alarm signalling.

#### CONDENSER TEMPERATURE ALARM

| AP2 | Probe selection for temperature alarm of condenser: (nP; P1; P2; P3; P4)   |
|-----|--|
|     | nP = no probe; P1 = thermostat probe; P2 = evaporator probe; P3 = configurable probe; P4 = Probe on Hot Key plug.  |
| AL2 | Low temperature alarm of condenser: (-55 to 150°C; -67 to 302°F) when this temperature is reached the LA2 alarm is signalled, possibly after the Ad2 delay.  |
| Au2 | <b>High temperature alarm of condenser:</b> (-55 to 150°C; -67 to 302°F) when this temperature is reached the <b>HA2</b> alarm is signalled, possibly after the <b>Ad2</b> delay.                                    |
| AH2 | Differential for temperature condenser alarm recovery: 0.1 to 25.5°C; 1 to 45°F  |
| Ad2 | Condenser temperature alarm delay: (0 to 255 min) time interval between the detection of the condenser alarm condition and alarm signalling.   |
| dA2 | Condenser temperature alarm exclusion at start up: 0.0 to 24h00min, res. 10min.  |
| bLL | Compressor off with low temperature alarm of condenser: (n; Y) n = compressor keeps on working; Y = compressor is switched off till the alarm is present, in any case regulation restarts after AC time at minimum.  |
| AC2 | Compressor off with high temperature alarm of condenser: (n; Y) n = compressor keeps on working; Y = compressor is switched off till the alarm is present, in any case regulation restarts after AC time at minimum. |

#### **AUXILIARY RELAYS**

|  | tbA | Alarm relay silencing (with oAx =ALr): (n; Y) n = silencing disabled: alarm relay stays on till alarm condition lasts. Y = silencing enabled: alarm relay is switched OFF by pressing a key during an alarm.   |
|--|-----|--|
|  | oA3 | Third relay configuration (1-3): (dEF; FAn; ALr; LiG; AUS; onF; db; dEF2; HES) dEF = defrost; FAn = do not select it; ALr = alarm; LiG = light; AUS = Auxiliary relay; onF = always on with instrument on; db = neutral zone; dEF2 = do not select it; HES = night blind.    |
|  | oA4 | Fourth relay configuration (22-23): (dEF; FAn; ALr; LiG; AUS; onF; db; dEF2; HES) dEF = defrost; FAn = do not select it; ALr = alarm; LiG = light; AUS = Auxiliary relay; onF = always on with instrument on; db = neutral zone; dEF2 = do not select it; HES = night blind. |
|  | oA5 | Fifth relay configuration (20-21): (dEF; FAn; ALr; LiG; AUS; onF; db; dEF2; HES) dEF = defrost; FAn = do not select it; ALr = alarm; LiG = light; AUS = Auxiliary relay; onF = always on with instrument on; db = neutral zone; dEF2 = do not select it; HES = night blind.  |
|  | AoP | Alarm relay polarity: (CL; oP) it set if the alarm relay is open or closed when an alarm occurs CI = terminals closed during an alarm: oP = terminals open during an alarm   |

#### DIGITAL INPUTS

odC

| i1P  | First digital input polarity: (oP; CL) oP = the digital input is activated by opening the contact; CL = the digital input is activated by closing the contact.  |  |  |
|--|---|--|--|
| i1F  | First digital input configuration: (EAL; bAL; PAL; dor; dEF; ES; AUS; Htr; FAn; HdF; onF; Sbt) EAL = external alarm: "EA" message is displayed; bAL = serious alarm "CA" message is displayed; PAL = pressure switch alarm, "CA" message is displayed; dor = door switch function; dEF = activation of a defrost cycle; ES = energy saving; AUS = auxiliary relay activation with oA2=AUS; Htr = type of inverting action (cooling or heating); FAn = fan; HdF = Holiday defrost (enable only with RTC); onF = to switch the controller off; Sbt = to activate Sabbath mode.  |  |  |
| i2P Second digital input polarity: (oP; CL) oP = the digital input is activated the contact; CL = the digital input is activated by closing the contact. |   |  |  |
| i2F  | Second digital input configuration: (EAL; bAL; PAL; dor; dEF; ES; AUS; Htr; FAn; HdF; onF; Sbt) EAL = external alarm: "EA" message is displayed; bAL = serious alarm "CA" message is displayed; PAL = pressure switch alarm, "CA" message is displayed; dor = door switch function; dEF = activation of a defrost cycle; ES = energy saving; AUS = auxiliary relay activation with oA2=AUS; Htr = type of inverting action (cooling or heating); FAn = fan; HdF = Holiday defrost (enable only with RTC); onF = to switch the controller off; Sbt = to activate Sabbath mode. |  |  |
| did  | Digital input 1 alarm delay: (0 to 255 min) delay between the detection of the external alarm condition and its signalling.  When i1F= PAL, it is the interval of time to calculate the number of pressure switch activation.   |  |  |
| doA  | Door open alarm delay: 0 to 255 min.  |  |  |
| nPS  | Number of pressure switch activation: (0 to 15) Number of activation, during the did or d2d interval, before signalling an alarm event (i1F, i2F=PAL).  If the nPS activation during did or d2d time is reached, switch off and on the instrument to restart normal regulation.   |  |  |
|  | ( 5, 00 50)   |  |  |

Compressor status when open door: (no; FAn;  $CPr;F\_C;$ ) no = normal; FAn = normal; CPr = compressor OFF,  $F\_C$  = compressor OFF.

3/6

| rrd | Outputs restart after door open alarm: (n; Y) n = outputs follow the odC parameter. Y = outputs restart with a door open alarm. |
|-----|---|
| HES | Delta temperature during an Energy Saving cycle: (-30.0 to 30.0°C; -54 to 54°F) it  |
|     | sets the increasing value of the set point [SET+HES] during the Energy Saving cycle   |

#### CURRENT TIME AND WEEKLY HOLIDAYS (ONLY FOR MODELS WITH RTC)

| Hur | Current hour: 0 to 23h.  |
|-----|--|
| Min | Current minute: 0 to 59min.  |
| dAY | Current day: Sun to SAt.   |
| Hd1 | First weekly holiday: (Sun to nu) set the first day of the week which follows the holiday          |
|     | times.   |
| Hd2 | Second weekly holiday: (Sun to nu) set the second day of the week which follows the holiday times. |

N.B.: Hd1. Hd2 can be set also as "nu" value (Not Used).

#### ENERGY SAVING TIMES (only for models with rtc)

| ILE | Energy Saving cycle start during workdays: (0 to 23h50min) during the Energy Saving cycle the set point is increased by the value in HES so that the operation set point is SET+HES. |
|-----|--|
| dLE | Energy Saving cycle length during workdays: (0 to 24h00min) sets the duration of the Energy Saving cycle on workdays.  |
| ISE | Energy Saving cycle start on holidays: 0 to 23h50min.  |
| dSE | Energy Saving cycle length on holidays: 0 to 24h00min.   |

#### TO SET DEFROST TIMES (ONLY FOR MODELS WITH RTC)

| Ld1÷Ld6 | Workday defrost start: (0 to 23h50min) these parameters set the beginning of the 6 programmable defrost cycles during workdays. Ex: when Ld2=12.4 the second defrost starts at 12.40 during workdays. |
|---------|---|
| Sd1÷Sd6 | Holiday defrost start: (0 to 23h50min) these parameters set the beginning of the 6 programmable defrost cycles on holidays. Ex: when <b>Sd2=3.4</b> the second defrost starts at 3.40 on holidays.    |

#### N.B.: to disable a defrost cycle set it to "nu" (not used).

#### OTHER

| LoC  | Lock keyboard timer: nu(9) = keyboard never blocked, or 10 to 255 sec  Serial address: (1 to 247) identifies the instrument address when connected to a ModBUS compatible monitoring system. |  |  |  |
|--|--|--|--|--|
| Adr  |  |  |  |  |
| PbC Type of probe: (PtC; ntC) it allows to set the kind of probe used by the instrum PtC = PTC probe, ntC = NTC probe. |  |  |  |  |
| onF  | On/Off key enabling: (nU; oFF; ES) nU = disabled; oFF = enabled; ES = not set it.  |  |  |  |
| dP1  | Thermostat probe display.  |  |  |  |
| dP2  | Evaporator probe display.  |  |  |  |
| dP3  | Third probe display.   |  |  |  |
| dP4  | Fourth probe display.  |  |  |  |
| rSE  | Real set point: it shows the set point used during the energy saving cycle or during the   |  |  |  |
|  | continuous cycle.  |  |  |  |
| rEL  | Software release for internal use.   |  |  |  |
| Ptb  | Parameter table code: readable only.   |  |  |  |
|  |  |  |  |  |

#### 9. DIGITAL INPUTS

The first digital input (terminals 13-14) is enabled if P3P=n.

With P3P=n and i1F=i2F the second digital input will be disabled.

The free voltage digital inputs are programmable by the i1F and i2F parameters

#### 9.1 GENERIC ALARM (i1F or i2F = EAL)

As soon as the digital input is activated the unit will wait for **did** time delay before signalling the "EAL' alarm message. The outputs status doesn't change. The alarm stops just after the digital input is deactivated.

#### 9.2 SERIOUS ALARM MODE (i1F or i2F = bAL)

When the digital input is activated, the unit will wait for **did** delay before signalling the "CA" alarm message. The relay outputs are switched OFF. The alarm will stop as soon as the digital input is deactivated.

#### 9.3 PRESSURE SWITCH (i1F or i2F = PAL)

If during the interval time set by **did** parameter, the pressure switch has reached the number of activation of the **nPS** parameter; the "CA" pressure alarm message will be displayed. The compressor and the regulation are stopped. When the digital input is ON the compressor is always OFF. If the **nPS** activation in the **did time is reached**, switch off and on the instrument to restart normal regulation.

#### 9.4 DOOR SWITCH INPUT (i1F or i2F = dor)

It signals the door status and the corresponding relay output status through the odC parameter: no: normal (any change); FAn: Fan OFF; CPr: Compressor OFF; F\_C: Compressor and fan OFF. Since the door is opened, after the delay time set through parameter did, the door alarm is enabled, the display shows the message "dA" and the regulation restarts if rtr=YES. The alarm stops as soon as the external digital input is disabled again. With the door open, the high and low temperature alarms are disabled.

#### 9.5 START DEFROST (i1F or i2F = dEF)

It starts a defrost if there are the right conditions. After the defrost is finished, the normal regulation will restart only if the digital input is disabled otherwise the instrument will wait until the MdF safety time is expired.

#### 9.6 SWITCH THE AUXILIARY RELAY (i1F or i2F = AUS)

With oAx=AUS the digital input will change the status of the auxiliary relay

#### 9.7 INVERSION OF THE KIND OF ACTION: HEATING-COOLING (i1F or i2F=Htr)

This function allows to invert the regulation of the controller: from cooling to heating and viceversa

#### 9.8 ENERGY SAVING (i1F or i2F = ES)

The Energy Saving function allows to change the set point value as the result of the **SET+HES** (parameter) sum. This function is enabled until the digital input is activated.

#### 9.9 HOLIDAY DEFROST (i1F or i2F = HDF) (ONLY FOR MODELS WITH RTC)

This function enabled the holiday defrost setting.

#### 9.10 ON OFF FUNCTION (i1F or i2F = onF)

To switch the controller on and off

#### 9.11 DIGITAL INPUTS POLARITY

The digital input polarity depends on the i1P and i2P parameters.

- i1P or i2P =CL: the input is activated by closing the contact.
- i1P or i2P=OP: the input is activated by opening the contact.

#### 10. TTL SERIAL LINE – FOR MONITORING SYSTEMS

The TTL serial line, available through the HOT KEY connector, allows by means of the external TTL/RS485 converter, **XJ485-CX**, to connect the instrument to a monitoring system **ModBUS-RTU** compatible such as the X-WEB500/3000/300.

#### 11. X-REP OUTPUT - OPTIONAL

As optional, an X-REP can be connected to the instrument, trough the dedicated connector




To connect the X-REP to the instrument the following connectors must be used CAB/REP1(1m), CAB/REP2 (2m), CAB/REP5 (5m),

#### 12. INSTALLATION AND MOUNTING

The **XW90LT** shall be mounted on vertical panel, in a 150x31 mm hole, and fixed using the special brackets supplied with the controllers. The temperature range allowed for correct operation is 0 to 60°C. Avoid places subject to strong vibrations, corrosive gases, excessive dirt or humidity. The same recommendations apply to probes. Let the air circulate by the cooling holes.

#### 12.1 CUT OUT

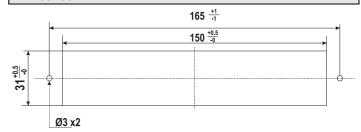

#### 13. ELECTRICAL CONNECTIONS

The instruments are provided with screw terminal block to connect cables with a cross section up to 2.5 mm² for the digital and analogue inputs. Relays and power supply have a Faston connection (6.3mm). Heat-resistant cables have to be used. Before connecting cables make sure the power supply complies with the instrument's requirements. Separate the probe cables from the power supply cables, from the outputs and the power connections. Do not exceed the maximum current allowed on each relay, in case of heavier loads use a suitable external relay.

#### N.B. Maximum current allowed for all the loads is 20A.

#### 13.1 PROBE CONNECTION

The probes shall be mounted with the bulb upwards to prevent damages due to casual liquid infiltration. It is recommended to place the thermostat probe away from air streams to correctly measure the average room temperature. Place the defrost termination probe among the evaporator fins in the coldest place, where most ice is formed, far from heaters or from the warmest place during defrost, to prevent premature defrost termination.

### 14. HOW TO USE THE HOT KEY

## 14.1 PROGRAM A HOT KEY FROM AN INSTRUMENT (UPLOAD)

- 1. Program one controller with the front keypad.
- When the controller is <u>ON</u>, insert the "HOT-KEY" and push UP button; the "uPL" message appears followed a by a flashing "End" label.
- 3. Push **SET** button and the "**End**" will stop flashing
- 4. <u>Turn OFF</u> the instrument, remove the "HOT-KEY" and then turn it ON again

**NOTE**: the "Err" message appears in case of a failed programming operation. In this case push again button if you want to restart the upload again or remove the "HOT-KEY" to abort the operation.

#### 14.2 PROGRAM AN INSTRUMENT BY USING A HOT KEY (DOWNLOAD)

- 1. Turn OFF the instrument
- Insert a pre-programmed "HOT-KEY" into the 5-PIN receptacle and then turn the Controller ON.
- The parameter list of the "HOT-KEY" will be automatically downloaded into the Controller memory. The "doL" message will blink followed a by a flashing "End" label.
- 4. After 10 seconds the instrument will restart working with the new parameters.
- Remove the "HOT-KEY".

XW90LT

**NOTE:** the message "Err" is displayed for failed programming. In this case turn the unit off and then on if you want to restart the download again or remove the "HOT-KEY" to abort the operation.



| Message | Cause                            | Outputs   |
|---------|----------------------------------|---|
| P1      | Room probe failure               | Compressor output acc. to par. Con and CoF  |
| P2      | Evaporator probe failure         | Defrost end is timed  |
| P3      | Third probe failure              | Outputs unchanged   |
| P4      | Fourth probe failure             | Outputs unchanged   |
| HA      | Maximum temperature alarm        | Outputs unchanged.  |
| LA      | Minimum temperature alarm        | Outputs unchanged.  |
| HA2     | Condenser high temperature       | It depends on the AC2 parameter   |
| LA2     | Condenser low temperature        | It depends on the <b>bLL</b> parameter  |
| dA      | Door open                        | Compressor and fans restarts  |
| EA      | External alarm                   | Output unchanged.   |
| CA      | Serious external alarm (i1F=bAL) | All outputs OFF.  |
| CA      | Pressure switch alarm (i1F=PAL)  | All outputs OFF   |
| rtC     | Real time clock alarm            | Alarm output ON; Other outputs unchanged;<br>Defrosts according to par. idF Set real time clock<br>has to be set. |
| rtF     | Real time clock board failure    | Alarm output ON; Other outputs unchanged;<br>Defrosts according to par. idF. Contact the<br>service.              |

#### 15.1 SILENCING BUZZER / ALARM RELAY OUTPUT

- tbA=Y: the buzzer and the relay are is silenced by pressing any key.
- tbA=n: only the buzzer is silenced while the alarm relay is on until the alarm condition recovers.

#### 15.2 ALARM RECOVERY

Probe alarms P1, P2, P3 and P4 start some seconds after the fault in the related probe; they automatically stop some seconds after the probe restarts normal operation. Check connections before replacing the probe.

Temperature alarms HA, LA, HA2 and "LA2 automatically stop as soon as the temperature returns to

Alarms EA and CA (with i1F=bAL) recover as soon as the digital input is disabled.

Alarm CA (with i1F=PAL) recovers only by switching off and on the instrument.

### 15.3 OTHER MESSAGES

| on   | Keyboard enabled after automatic lock.                                |
|------|---|
| LOC  | Keyboard automatically locked   |
| Pon  | Keyboard unlocked.  |
| PoF  | Keyboard locked   |
| noP  | In programming mode: none parameter is present in Pr1                 |
| IIOP | On the display or in dP2, dP3, dP4: the selected probe is nor enabled |

## 16. TECHNICAL DATA

Housing: self extinguishing ABS Case: facia 38x185 mm; depth 76mm

Mounting: panel mounting in a 150x31 mm panel cut-out with the 2 metal brackets supplied

Protection: IP20 Frontal protection: IP65

**Connections:** screw terminal block ≤ 2.5 mm<sup>2</sup> heat-resistant wiring and 6.3mm Faston

Power supply: 230Vac or. 110Vac or 24Vac  $\pm$  10%

Power absorption: 5VA max

Display: 3 digits, white LED, 14.2 mm high Inputs: Up to 4 NTC or PTC probes Digital inputs: 2 free voltage

Relay outputs: <u>Total current on loads MAX. 20A</u> Compressor: relay SPST 20(8) A, 250Vac Light: relay SPST 8 or 16(3) A, 250Vac Fans: relay SPST 8(3) A, 250Vac Defrost: relay SPST 8(3) A, 250Vac Auxiliary: SPST relay 8(3) A, 250Vac

Alarm: SPST relay 8(3) A, 250Vac Other output: buzzer

Serial output: TTL standard

Communication protocol: Modbus - RTU Data storing: on the non-volatile memory (EEPROM) Internal clock back-up: 24 hours (only for model with RTC)

Kind of action: 1B Pollution degree: 2 Software class: A


Rated impulsive voltage: 2500V Over voltage Category: II

Operating temperature: 0 to 60 °C (32 to 140°F) Storage temperature: -30 to 85°C (-22 to 185°F). Relative humidity: 20 to 85% (not condensing)

Measuring and regulation range: NTC probe: -40 to 110°C (-40 to 230°F) PTC probe: -50 to 150°C (-58 to 302°F)

Resolution: 0.1°C or 1°C or 1°F (selectable) Accuracy (ambient temp. 25°C): ±0.7°C ±1 digit

## 17. CONNECTIONS



Supply: 120Vac or 24Vac: connect to terminals 11-12

The X-REP output is optional

| ahal      | Name  | Range                                       | °C/°F    | Leve       |
|-----------|---|---|----------|------------|
|           | Set point   | LS to US                                    | -5.0     | Leve       |
|           | Real time clock menu  | -   | -        | Pr1        |
| Ну        | Differential  | [0.1 to 25.5°C]<br>[1 to 45°F]              | 2.0      | Pr1        |
| LS        | Minimum set point   | [-55°C to SET]                              | -50.0    | Pr2        |
| US        | Maximum set point   | [SET to 150°C]<br>[SET to 302°F]            | 110      | Pr2        |
| ot        | Thermostat probe calibration  | [-12 to 12°C]<br>[-21 to 21°F]              | 0.0      | Pr1        |
| 2P        | Evaporator probe presence   | n=not present; Y=present<br>[-12 to 12°C]   | Y        | Pr1        |
|           | Evaporator probe calibration  | [-21 to 21°F]                               | 0.0      | Pr2        |
| 93P<br>03 | Third probe presence Third probe calibration                              | n=not present; Y=present<br>[-12 to 12°C]   | 0<br>0   | Pr2        |
|           | Fourth probe presence   | [-21 to 21°F]<br>n=not present; Y=present   | n        | Pr2        |
|           | Fourth probe calibration  | [-12 to 12°C]                               | 0        | Pr2        |
|           | Outputs delay at start up   | [-21 to 21°F]<br>0 to 255 min               | 0        | Pr2        |
|           | Anti-short cycle delay  | 0 to 50 min                                 | 1        | Pr1        |
|           | Second compressor start delay   | 0 to 255 sec                                | 5        | Pr2        |
|           | P1-P2 percentage for regulation Continuous cycle duration                 | 0 to 100 (100=P1 , 0=P2)<br>0.0 to 24h00min | 0.0      | Pr2<br>Pr2 |
|           | · · · · · · · · · · · · · · · · · · ·                                     | [-55.0 to 150.0°C]                          |          |            |
| CS        | Set point for continuous cycle  | [-67 to 302°F]                              | -5       | Pr2        |
|           | Compressor ON time with faulty probe                                      | 0 to 255 min                                | 15       | Pr2        |
|           | Compressor OFF time with faulty probe                                     | 0 to 255 min                                | 30       | Pr2        |
|           | Temperature measurement unit Resolution                                   | °C to °F                                    | °C<br>dE | Pr2<br>Pr1 |
|           | Probe displayed   | in=integer; dE= dec.point<br>P1; P2         | P1       | Pr2        |
|           | X-REP display   | P1; P2; P3; P4; SEt; dtr                    | P1       | Pr2        |
|           | Display temperature delay   | 0.0 to 20min00sec (10 sec)                  | 0.0      | Pr2        |
|           | P1-P2 percentage for display  | 1 to 99                                     | 50       | Pr2        |
|           | Kind of interval for defrost  | rtC; in                                     | in       | Pr2        |
| dF        | Defrost type  | EL=el. heater; in= hot gas                  | EL       | Pr1        |
| IFP       | Probe selection for defrost termination                                   | nP; P1; P2; P3; P4                          | P2       | Pr2        |
|           | Defrost termination temperature   | -50 to 50°C                                 | 8        | Pr1        |
|           | Interval between defrost cycles   | 1 to 120 hours                              | 6        | Pr1        |
|           | (Maximum) length for defrost  | 0 to 255 min                                | 30       | Pr1        |
|           | Start defrost delay   | 0 to 99min                                  | 0        | Pr2        |
|           | Displaying during defrost MAX display delay after defrost                 | rt; it; SEt; DEF<br>0 to 255 min            | it 30    | Pr2<br>Pr2 |
|           | Draining time   | 0 to 120 min                                | 0        | Pr2        |
|           | First defrost after start-up  | n=after idF; y=immed.                       | n        | Pr2        |
|           | Defrost delay after fast freezing   | 0.0 to 23h50min                             | 0.0      | Pr2        |
|           | Fan operating mode  | C-n; o-n; C-y; o-Y                          | o-n      | Pr1        |
| nd        | Fan delay after defrost   | 0 to 255 min                                | 10       | Pr1        |
| -Ct       | Differential of temperature for forced activation of fans                 | 0 yo 50°C                                   | 10       | Pr2        |
| St        | Fan stop temperature  | [-50 to 50°C]<br>[-55 to 122°F]             | 2        | Pr1        |
| on        | Fan on time with compressor off   | 0 to 15 min                                 | 0        | Pr2        |
|           | Fan off time with compressor off  | 0 to 15 min                                 | 0        | Pr2        |
|           | Probe selection for fan management  | nP; P1; P2; P3; P4                          | P2       | Pr2        |
| СН        | Kind of action for auxiliary relay  | CL; Ht                                      | cL       | Pr2        |
| AA        | Set Point for auxiliary relay   | [-55.0 to 150°C]<br>[-67 to 302°F]          | 0,0      | Pr2        |
| Ну        | Differential for auxiliary relay  | [0.1 to 25.5°C]<br>[1 to 45°F]              | 2,0      | Pr2        |
| ٩rP       | Probe selection for auxiliary relay                                       | nP; P1; P2; P3; P4                          | nP       | Pr2        |
|           | Auxiliary relay operating during defrost                                  | n(0); Y(1)                                  | n        | Pr2        |
|           | Alarm probe selection   | nP; P1; P2; P3; P4<br>rE= related to set;   | P1       | Pr2        |
| LC        | Temperat. alarms configuration  | Ab = absolute [SET to 150.0°C]              | Ab       | Pr2        |
| LU        | MAXIMUM temperature alarm   | [SET to 302°F]                              | 110,0    | Pr1        |
| LL        | Minimum temperature alarm   | [-55.0°C to SET]<br>[-67°F to SET]          | -50,0    | Pr1        |
| FΗ        | Differential for temperat. alarm recovery                                 | [0.1 to 25.5°C]<br>[1 to 45°F]              | 2,0      | Pr2        |
|           | Temperature alarm delay   | 0 to 255 min                                | 15       | Pr2        |
|           | Delay of temperature alarm at start up                                    | 0.0 to 23h50min                             | 1,3      | Pr2        |
|           | Probe for temperat. alarm of condenser  Condenser for low temperat. alarm | nP; P1; P2; P3; P4<br>[-55 to 150°C]        | -40      | Pr2        |
|           | Condenser for high temperat. alarm  | [-67 to 302°F]<br>[-55 to 150°C]            | 110      | Pr2        |
|           | Differ. for condenser temp. alar. recovery                                | [-67 to 302°F]<br>[0.1°C to 25.5°C]         | 5        | Pr2        |
|           | Condenser temperature alarm delay   | [1°F to 45°F]<br>0 to 254 min; 255=nU       | 15       | Pr2        |
|           | Delay of cond. temper. alarm at start up                                  | 0.0 to 23h50min                             | 1,3      | Pr2        |
|           | Compr. off for condenser low  | n(0); Y(1)                                  | n        | Pr2        |
| ιLL       | temperature alarm   |   |          |            |
| AC2       | temperature alarm Compr. off for condenser high temperature alarm         | n(0); Y(1)                                  | n        | Pr2        |



| Label      | Name                                    | Range  | °C/°F | Level |
|------------|---|--|-------|-------|
|            |   | ALr = alarm; dEF = do not select                                     |       |       |
|            |   | it; Lig =Light; AUS =AUX;  |       |       |
| ~ 4.3      | Third relay configuration               | onF=always on; Fan= do not   | Lia   | Pr2   |
| UAS        | Third relay configuration               | select it; db = neutral zone; cP2                                    | Lig   | FIZ   |
|            |   | = second compressor; dF2 = do  |       |       |
|            |   | not select it; HES = night blind                                     |       |       |
|            |   | ALr = alarm; dEF = do not select                                     |       |       |
|            |   | it; Lig =Light; AUS =AUX;  |       |       |
| oA4        | Fourth relay configuration              | onF=always on; Fan= do not   | AUS   | Pr2   |
|            | , ,                                     | select it; db = neutral zone; cP2                                    |       |       |
|            |   | = second compressor; dF2 = do  |       |       |
| -          |   | not select it; HES = night blind<br>ALr = alarm; dEF = do not select |       |       |
|            |   | it; Lig =Light; AUS =AUX;  |       |       |
|            | L                                       | onF=always on; Fan= do not   |       |       |
| oA5        | Fifth relay configuration               | select it; db = neutral zone; cP2                                    | ALr   | Pr2   |
|            |   | = second compressor; dF2 = do  |       |       |
|            |   | not select it; HES = night blind                                     |       |       |
| AoP        | Alarm relay polarity (oAx=ALr)          | oP; cL   | cL    | Pr2   |
|            | Digital input polarity                  | oP=opening; CL=closing   | cL    | Pr1   |
| i1F        |   | EAL, bAL, PAL, dor; dEF; Htr,  | dor   | Pr1   |
| 111        | Digital input 1 configuration           | AUS  | dor   | FII   |
| did        | Digital input alarm delay               | 0 to 255 min   | 15    | Pr1   |
| i2P        | Digital input polarity                  | oP=opening; CL=closing   | cL    | Pr2   |
| i2F        | Digital input configuration             | EAL, bAL, PAL, dor; dEF; Htr,  | EAL   | Pr2   |
|            | <u> </u>                                | AUS  |       |       |
|            | Digital input alarm delay               | 0 to 255 min   | 5     | Pr2   |
| Nps        | Number of activation of pressure switch | 0 to 15  | 15    | Pr2   |
| odc        | Compress and fan status when open       | no; Fan; CPr; F_C  | F-c   | Pr2   |
|            | door                                    |  |       | D-0   |
| rrd        | Regulation restart with door open alarm | n(0); Y(1)   | у     | Pr2   |
| HES        | Differential for Energy Saving          | [-30 to 30°C]<br>[-54 to 54°F]                                       | 0     | Pr2   |
| <b>⊔</b> * | Current hour                            | 0 to 23  | _     | rtc   |
|            | Current minute                          | 0 to 59  | -     | rtc   |
|            | Current day                             | Sun to SAt   | -     | rtc   |
|            | First weekly holiday                    | Sun to SAt; nu   | nu    | rtc   |
|            | Second weekly holiday                   | Sun to SAt; nu   | nu    | rtc   |
|            | Energy Saving cycle start during        |  |       |       |
|            | Workdays                                | 0.0 to 23h50min  | 0     | rtc   |
|            | Energy Saving cycle length during       | 0.01.041.00  | _     |       |
| dLE*       | workdays                                | 0.0 to 24h00min  | 0     | rtc   |
| ISE*       | Energy Saving cycle start on holidays   | 0.0 to 23h50min  | 0     | rtc   |
|            | Energy Saving cycle length on holidays  | 0.0 to 24h00min  | 0     | rtc   |
|            | 1st workdays defrost start              | 0.0 to 23h50min; nu  | 6.0   | rtc   |
| Ld2*       | 2nd workdays defrost start              | 0.0 to 23h50min; nu  | 13.0  | rtc   |
|            | 3rd workdays defrost start              | 0.0 to 23h50min; nu  | 21.0  | rtc   |
|            | 4th workdays defrost start              | 0.0 to 23h50min; nu  | 0.0   | rtc   |
| Ld5*       | 5th workdays defrost start              | 0.0 to 23h50min; nu  | 0.0   | rtc   |
|            | 6th workdays defrost start              | 0.0 to 23h50min; nu  | 0.0   | rtc   |
|            | 1st holiday defrost start               | 0.0 to 23h50min; nu  | 6.0   | rtc   |
|            | 2nd holiday defrost start               | 0.0 to 23h50min; nu  | 13.0  | rtc   |
|            | 3rd holiday defrost start               | 0.0 to 23h50min; nu  | 21.0  | rtc   |
|            | 4th holiday defrost start               | 0.0 to 23h50min; nu  | 0.0   | rtc   |
|            | 5th holiday defrost start               | 0.0 to 23h50min; nu  | 0.0   | rtc   |
|            | 6th holiday defrost start               | 0.0 to 23h50min; nu  | 0.0   | rtc   |
|            | Keyboard lock timer                     | nu; 10 to 255 sec  | 60    | Pr2   |
|            | Serial address                          | 1 to 247   | 1     | Pr2   |
|            | Kind of probe                           | PtC; ntC   | ntc   | Pr2   |
|            | on/off key enabling                     | nu, oFF; ES  | oFF   | Pr2   |
|            | Room probe display                      | Read Only  | -     | Pr2   |
|            | Evaporator probe display                | Read Only  | -     | Pr2   |
|            | Third probe display                     | Read Only  | -     | Pr2   |
|            | Fourth probe display                    | Read Only  | -     | Pr2   |
|            | Real set                                | actual set   | -     | Pr2   |
| rEL        | Software release                        | Read Only  | 6.9   | Pr2   |
| Ptb        | Map code                                | Read Only  |       | Pr2   |

Ptb | Map code

\* Only for model with real time clock
2 Only for XW90LT with X-REP output





Dixell S.r.I. - 32010 Pieve d'Alpago (BL) ITALY - Z.I. Via dell'Industria, 27 Tel. +39.0437.9833 r.a. - Fax +39.0437.989313 - www.dixell.com - dixell@emerson.com